

# Front seats

2. Do not move the driver's seat too close to the steering wheel. Ideally, a minimum distance of 254 mm (10 inches) is recommended between the breastbone and the steering wheel airbag cover. Hold the steering wheel in the correct position with arms slightly bent.

  - Adjust the head restraint so that the top of the head restraint is above the centre line of the head.
  - Position the seat belt so that it crosses the chest, mid-way between the neck and shoulder. Fit the strap tightly across the hips, not across the stomach.
  - Ensure that the driving position is comfortable and enables full control of the vehicle to be maintained.

## PASSENGER SEAT AWAY



E135027

This feature allows the fore and aft position of the front passenger seat to be adjusted from the driver seat and rear passenger seats. Press the front of the button to move the seat forwards; press the rear of the button to move the seat rearwards.