

7. **Station list** (FM only): Select to view a list of available stations on the waveband. The list can be sorted by **Frequency**, **Name** or **PTY** (pop, news, sport etc.) by selecting the appropriate soft key. Touch to select the chosen station.  
If the stations are sorted by category, touch the chosen category to view and select a corresponding station.
  8. **Frequency input**: Select to enter a known frequency of a station on the current waveband, using the numeric keypad that appears. Select OK or wait for 2 seconds to tune to the entered frequency.
  9. **Traffic** (Japan only): Touch to search for broadcasts on the 2 traffic information channels. If no traffic information is available, the previous frequency will resume.
  10. **Station presets**: Each waveband has 6 preset positions.
    - Touch and release to tune to the station stored on that preset.
    - Touch and hold to store the current station on that preset (the radio will mute while the station is stored then beep).
    - Use the seek buttons on the steering wheel to change to the next or previous preset station.
- **Regionalisation (REG)**: Select to prevent the radio tuning into an alternative local station that has a stronger signal.
  - **Alternative Frequency (AF)**: Select to allow the radio to automatically re-tune to a stronger alternative frequency for the current station. This is useful on a journey where the vehicle travels through different transmitter areas.

## RADIO DATA SYSTEM (RDS)

Your radio is equipped with RDS which enables the audio unit to receive additional information with normal FM radio signals.

**Note:** *Not all FM radio stations broadcast RDS information.*

Select **Settings** to view or alter RDS settings.

- **Traffic/News**: Provides local travel or news information.