
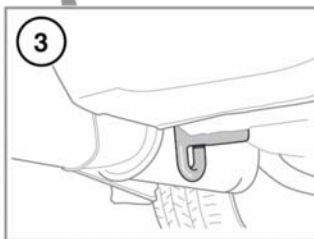
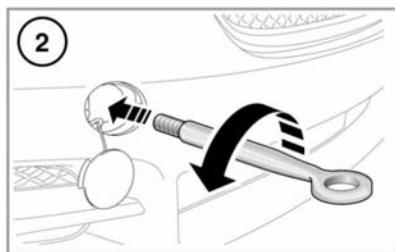
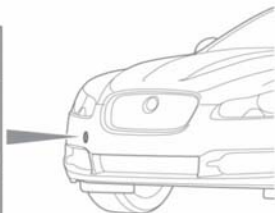


# Vehicle recovery

## TOWING EYES

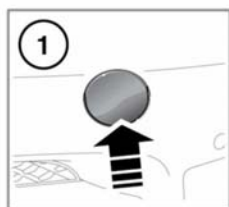

E143964

 **The towing eyes at the front and rear of the vehicle are designed for on-road recovery only.**


 **Do not tow the vehicle on all four wheels.**


## ATTACHING THE FRONT TOWING EYE

The front towing eye is included in the tool kit, located in the under-floor area of the luggage compartment.

1. Pop out the cover in the front bumper.
2. Locate the towing eye through the bumper and screw the towing eye anticlockwise into its fixing, until secure.
3. Rear towing eye.

## TRANSPORTING THE VEHICLE

 Only use the lashing points indicated, or over-wheel lashings or wheel chocks. Use of any other lashing position may cause damage to the vehicle.

 During vehicle recovery, to ensure the steering column remains unlocked, make sure the Smart Key remains in the vehicle, the rotary drive selector is in N (Neutral) and the ignition is on.

The recommended method for recovery/transportation of the vehicle, is on a transporter or trailer designed for that purpose. Ensure that transportation is carried out by suitably qualified persons and that the vehicle is secured correctly.