


# Touch screen

## TOUCH SCREEN HOME MENU

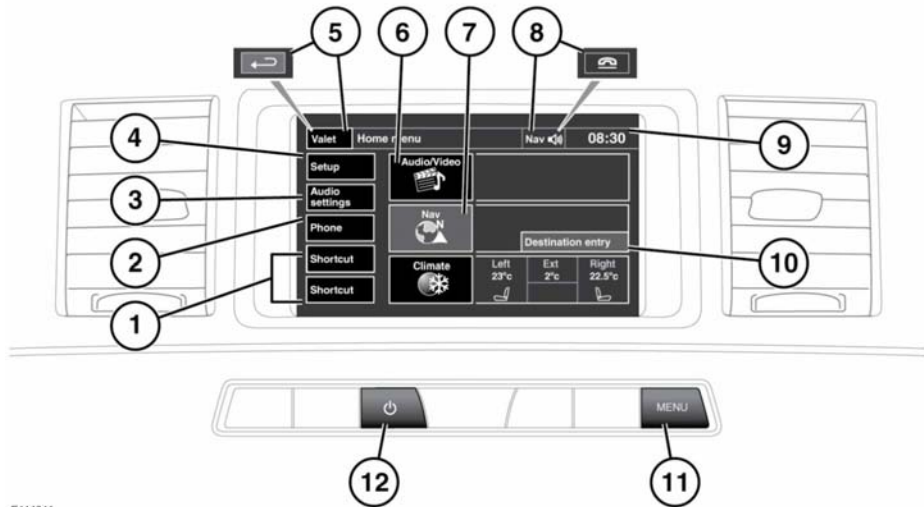

E144214



**Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.**



Always run the engine during prolonged use of the touch screen. Failure to do so may discharge the vehicle battery, preventing the engine from starting



Avoid spilling or splashing liquids onto the touch screen.

1. Touch to select Home menu shortcuts. See **61, TOUCH SCREEN SETUP**.
2. Touch to select the **Phone** menu.
3. Touch to **Audio settings** menu.
4. Touch to select the touch screen **Setup** menu.
5. Touch to select **Valet** mode. During menu mode, the icon is changed to the back soft key, touch to return to the previous screen displayed.

6. Touch to select the **Audio/Video** menu. See **103, AUDIO/VIDEO CONTROLS**.
7. Touch to select the **Navigation** menu. Current set destination is displayed. See **132, USING THE NAVIGATION SYSTEM**.
8. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
9. Touch to adjust time/date.
10. Touch for shortcut to **Destination entry** menu. See **135, SETTING A DESTINATION**.
11. Press to return the touch screen to the Home menu.
12. Press to turn the touch screen on. Press twice to turn the screen off.

**Note:** For vehicles with Intelligent stop/start, this switch position is used to turn the feature off. To turn on the touch screen, simply touch the screen. To turn the screen off again, touch this icon on the screen.