

Deployment of the front passenger airbag is not always beneficial for small/lower weight occupants and could be harmful to children/infants in restraint systems. Jaguar vehicles are fitted with a sensing system (conforming to FMVSS 208) that automatically detects when deployment of the front passenger airbag would be unnecessary or potentially harmful. If the seat is occupied by a lower weight adult and airbag deployment is judged by the system to be unnecessary, the passenger airbag will be deactivated and the **PASS AIR BAG OFF** lamp in the overhead console will be illuminated. An occupant weighing approximately 45.4 kg (100 lbs) is classified as a lower weight occupant, although, at this weight, with occupant movements and vehicle motion, the airbag activation/deactivation should be expected to switch states occasionally. This is not necessarily indicative of a system fault.

- Installation of electrical, or electronic, equipment and accessories.
- Modification to the front or sides of the vehicle exterior.
- Attachment of accessories to the front or sides of the vehicle.

AIRBAG SERVICE INFORMATION



Do not attempt to service, repair, replace, modify, or tamper with, any part of the SRS. This includes wiring or components in the vicinity of SRS components. Doing so may cause the system to trigger, or render the system inoperative.



Do not use any electrical test equipment or devices in the vicinity of SRS components or wiring. Doing so may cause the system to trigger, or render the system inoperative.

All of the following operations should only be carried out by a Dealer/Authorised Repairer, or suitably qualified person:-

- Removal or repair of any wiring or component in the vicinity of any SRS components.