

*Note: Not applicable to vehicles with Intelligent stop/start. The touch screen turns on and off with ignition.*

12. Press to turn Dual view on/off or select the **Audio settings** menu.
13. Press to select the **Home** menu.
14. Touch to select the **Climate** menu. See **62, FRONT CLIMATE CONTROL**.

## TOUCH SCREEN USE

- ⓘ Always run the engine during prolonged use of the touch screen. Failure to do so may discharge the vehicle battery, preventing the engine from starting
- ⓘ Avoid spilling or splashing liquids onto the touch screen.

The buttons on the centre console below the touch screen display, are referred to as **hard buttons** and should be pressed firmly. The touch screen buttons are referred to as **soft keys** and require only light pressure to function. Do not use excessive pressure.

## TOUCH SCREEN CARE

- ⓘ Do not use abrasive cleaners on the touch screen. For approved cleaning products, contact your Dealer/ Authorised Repairer.

## TOUCH SCREEN SETUP

- Select **Set-up** from the **Home** menu.

The setup screen is divided into categories:

- **Screen**
- **System**
- **Voice**
- **Audio**
- **Trip computer**
- **Security/Vehicle**

## SCREEN SETTINGS

- **Volume pop-up:** Display Volume pop-up on/off.
- **Screensaver:** Change screensaver.
- **Screen animations:** Turn animated transitions between screens on/off.  
*Note: While screen animations are on, system response time will be slower than normal.*
- **Time out home:** Sub menu selection screens can be set to revert to the **Home** menu after a pre determined length of time.
- **Theme:** Changes appearance of the touch screen soft keys.

## SYSTEM SETTINGS

- **Button feedback:** Select to turn the soft key confirmation tone on/off.
- **Clock adjust:** Select 12 or 24 hour clock. Set current time. Select **Date** to change the date, or to alter the date format. Select **Set**, to store new settings.

*Note: The clock can also be adjusted from the touch screen time display.*

- **Home menu shortcuts:** Select up to 2 items from the displayed list to appear as shortcuts on the **Home menu**. Select **Clear** to deselect highlighted items.
- **Language:** Select the required language. Select **Male** or **Female** voice. Touch **Change** to select alternatives for Voice and text displays. Follow the on-screen instructions to confirm.

*Note: Some languages are not yet available for both System display text and Voice control. In this event, it will be necessary to select a separate language for Voice control.*

- **Volume presets:** Adjust volume for the available systems (announcements, parking aid, phone, voice etc.).