
## REAR CLIMATE CONTROL

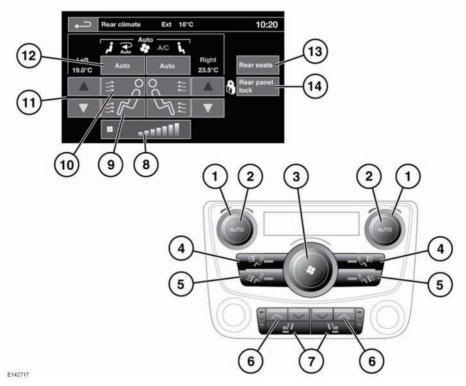

To access the rear climate touch screen menu, select **Rear climate** from the front climate menu.

- 1. Temperature control: Rotate to adjust temperature (16°C 28°C [59°F 83°F]). The temperature is displayed on the touch screen (rear climate menu).
- 2. AUTO control: Press to switch automatic operation on.
- Blower speed: Rotate to adjust blower speed.

With blower speed at minimum, rotate the control anticlockwise to switch the climate system off. Press AUTO to turn on again.

- Air distribution to face: Press to switch on/off. Switch indicator illuminates when on.
- Air distribution to feet: Press to switch on/off. Switch indicator illuminates when on.
- Seat temperature control: Press the red arrow to increase and the blue arrow to decrease temperature. The LEDs illuminate to indicate current setting.
- Climatic seat zone control: Press to select full seat or backrest only ventilation. The switch indicators illuminate accordingly.
- **8.** Blower speed indicator.

## Heating and ventilation

- Air distribution to feet: Touch to turn on/off
- **10.** Air distribution to face: Touch to turn on/off
- 11. Temperature adjustment: Select the red arrow to increase and the blue arrow to decrease temperature. The temperature setting is displayed above the arrows.
- **12. Auto**: Select to switch automatic operation on/off
- **13. Rear seats**: Select to adjust the rear seat temperature and ventilation settings.
- 14. Rear panel lock: Select to disable the rear climate control switches, to prevent the rear passengers from adjusting the rear climate settings. Select again to re-enable the controls.

In addition to the selectable controls, the rear climate menu displays symbols that indicate the status of heating and ventilation functions.

**Note:** If the climate control system is switched off, pressing a rear AUTO button will switch the climate control system on.

**Note:** If the system is in Defrost mode, all rear controls are disabled and no airflow is available to the rear occupants.