

## VOICE SETTINGS

- **Command list:** View the categories and the acceptable voice commands.  
Select an **Information** button to view alternative function commands.
- **Voicetags:** View the categories. Select a category to manage the voicetags for the chosen system. See **121, VOICETAGS**.
- **Operating guide:** View brief Voice system instructions. Select **Voice tutorial** for more detailed instructions (cancel via the displayed pop-up or by pressing and holding the voice button).
- **Preferences:** Select to alter the following settings:
  - **Voice profile:** The voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is **Standard**. To build a voice profile for either **User 1** or **User 2**, it is necessary to complete a training program first.  
To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.
  - **Voice feedback:** Select **On/Off**.
  - **Feedback volume:** Adjust using the +/- buttons. It is not possible to reduce the volume to zero.
- **Voice training:** Select to access the voice system training program, designed to enable the system to better recognise the vocal characteristics of a user.  
Select **User 1** or **User 2** and follow the on screen and audible instructions. See **121, VOICE TRAINING**.

The training session can be cancelled at any time by touching the on-screen pop-up or by pressing and holding the Voice button on the steering wheel. See **120, USING VOICE CONTROL**.

## SELECTING VALET MODE

Valet mode allows the vehicle to be locked by a parking attendant, without giving access to the loadspace and glove box. Valet mode also prevents operation of the touch screen, to prevent access to telephone numbers or navigation addresses.

1. From the **Home** menu, select **Valet**.
2. Enter a 4 digit Personal Identification Number (PIN) (personally chosen). On completion, touch the **OK** soft key.
3. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.
4. **Valet on** is displayed to indicate that the PIN has been accepted. The loadspace and glove box are now securely locked in Valet mode.
5. **Valet mode activated** is displayed to indicate that the PIN has been accepted.

The luggage compartment is now securely locked in Valet mode and the Valet mode On screen is displayed.

Remove and retain the emergency key before giving the Smart key to an attendant.

**Note:** *The emergency key can be used to open the luggage compartment, which may deactivate Valet mode.*

## DESELECTING VALET MODE

1. When you re-enter the vehicle, select the Valet mode screen.

2. Enter your four digit PIN and touch the **OK** button.

**Valet mode deactivated** is displayed to indicate that your PIN has been accepted.

- The loadspace will return to the previously set security requirement.
- The touch screen will be enabled.

**Note:** *If the PIN is forgotten, Valet mode can only be deactivated by your Dealer/Authorised Repairer.*