


Heating and ventilation

FRONT CLIMATE CONTROL

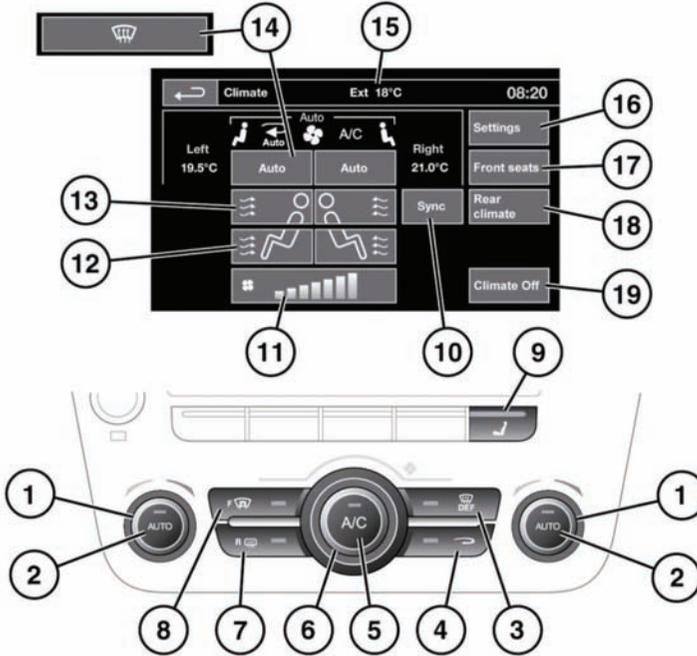

E142665

To access the front climate menu on the touch screen, select **Climate** from the home menu.

1. **Temperature control**: Rotate to adjust temperature (16°C - 28°C [59°F - 83°F]). The temperature is displayed on the touch screen.
2. **AUTO** control: Press to switch automatic operation on/off.
Note: AUTO mode should be used as the normal operating mode. The air conditioning, heating and ventilation controls automatically provide an optimum environment at the selected temperature.
3. **Defrost**: Press to activate the blowers, air-conditioning, front and rear screen heaters and prohibit recirculation.

4. **Recirculation**: Select to recirculate air inside the vehicle.
Press briefly to select **timed** recirculation. Recirculation will switch off automatically after a set time (dependent on the ambient temperature).
Press and hold to select **latched** recirculation. Recirculation will remain on until the button is pressed again.
Note: Prolonged use at low temperatures may cause the windows to mist.
5. **Air conditioning**: Press to switch on/off. The air conditioning system can be switched on/off independently of the other climate control functions.
6. **Blower speed**: Rotate to adjust blower speed.