Entering the vehicle

REMOTE KEY FOB BATTERY REPLACEMENT

Note: There are 2 designs of Smart Key, refer to the information which is relevant to the design of Smart Key supplied with the vehicle.


When the battery needs replacing, there will be a significant decrease in the effective range and the message **SMART KEY BATTERY LOW** is displayed in the message centre.



To replace the battery:

- 1. Press the release button on the side of the Smart Key.
- 2. Open the Smart Key cover.
- 3. Remove the battery drawer.
- 4. Remove the battery.
- **5.** Fit a new CR2032 type battery (available from your Dealer/Authorised Repairer), with the positive (+) side upwards.

6. Replace the battery drawer and close the Smart kev.

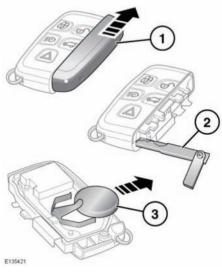

To replace the battery:

- 1. Slide the cover in the direction of the arrow until a click is heard. Remove the cover.
- 2. Use the emergency key blade to separate the Smart Key body.
- 3. Fit a new CR2032 type battery (available from your Dealer/Authorised Repairer), with the positive (+) side upwards.

Note: Avoid touching the new battery, as moisture/oil from your fingers can reduce battery life and corrode the contacts.

Refit the parts in the reverse order, ensuring that they click securely into place.



Battery disposal: Used batteries must be disposed of correctly, as they contain harmful substances. Seek advice on disposal from your Dealer/Authorised Repairer and/or your local authority.