

To reset the misfuelling device:-

1. Insert the reset tool with the teeth uppermost, as far as it will go into the filler neck.
2. Locate the teeth by pushing down the top of the reset tool.
3. With the top of the tool pressed down and the teeth engaged, slowly pull the tool out of the filler neck to reset the device.



Do not twist the device, once the teeth have engaged.

**Note:** When reset, the yellow part of the protection device should no longer be visible in the filler neck.

Replace the reset tool in position on the battery restraining bar.

## FUEL TANK CAPACITY

Avoid the risk of running out of fuel and never intentionally drive the vehicle when the fuel gauge indicates that the tank is empty. When refuelling your vehicle after the fuel gauge reads empty, you may not be able to add the fuel quantity shown below, as there will be a small reserve remaining in the tank.

<b>Total tank capacity</b> (usable):	
Petrol engines	80 litres (18 gallons)
Diesel engines	77 litres (17 gallons)
<b>Fill capacity</b> (when fuel gauge reads empty):	
Petrol engines	74 litres (16.3 gallons)
Diesel engines	68 litres (15 gallons)
<b>Reserve capacity</b> (when fuel gauge reads empty):	
Petrol engines	4 litres (0.9 gallons)
Diesel engines	4 litres (0.9 gallons)

## FUEL SPECIFICATION

<b>Petrol</b>	<b>Diesel</b>
95-98 RON	EN 590