

Maintenance

UNBLOCKING WASHER JETS

- ⚠ **Do not operate the washer jets during adjustment. Windscreen washer fluid may cause irritation to the eyes and skin. Always read and observe the washer fluid manufacturers instructions.**

If a washer jet becomes blocked, use a thin strand of wire to unblock the jet by inserting the wire into the jet. Ensure that the wire is completely removed after unblocking.

CHANGING A BULB

- ⚠ Always replace bulbs with the correct type and specification. If you are in any doubt contact your Dealer/Authorised Repairer for advice.

XENON LAMPS

- ⚠ **Replacement or maintenance of Xenon lamps should only be carried out by suitably qualified personnel.**
- ⚠ **High voltage is required to ignite the Xenon lamps.**
- ⚠ **Xenon lamp units operate at a very high temperature. Ensure that the lamp units have cooled before attempting to touch them.**

HEADLAMP BULB REPLACEMENT

- ⚠ Removal of the headlamp unit should only be attempted by a qualified technician. If in doubt, consult your Dealer/Authorised Repairer.



REAR LAMP REMOVAL

- ⚠ Removal of the rear lamp unit should only be attempted by a qualified technician. If in doubt, consult your Dealer/Authorised Repairer.

HIGH LEVEL BRAKE LAMP BULB REPLACEMENT

- ⚠ Removal of this lamp unit should only be attempted by a qualified technician. If in doubt, consult your Dealer/Authorised Repairer.

LICENSE PLATE LAMP BULB REPLACEMENT

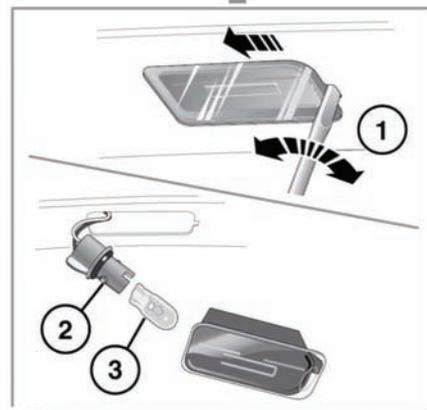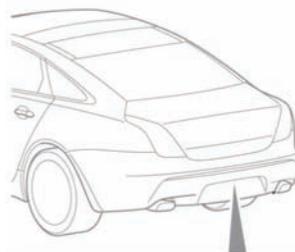

1. Insert a small flat-bladed screwdriver into the indent as shown and carefully lever out the side of the lamp unit and remove.
 2. Twist the bulb holder 90 degrees anticlockwise to access the bulb.
 3. Pull to remove the bulb from the holder.
- See **175, BULB SPECIFICATION** for the replacement bulb specification list.