

The range of the parking aid sensors varies between the front, rear and corners of the vehicle.

The front sensors will remain active as long as the vehicle's forward speed does not exceed 16 km/h (10 mph).

Selecting **N** from **R** will keep front and rear sensors active.

When parking aid is active a pop-up appears on the touch screen showing a plan view of the vehicle and the immediate surrounding area. Touch the screen to cancel the view.

Note: *If a rear-view camera is fitted, when reverse gear is selected, the camera display is selected automatically. To view the parking aid display, touch the screen.*

When objects are detected, the parking aid emits a warning tone which increases in frequency as the vehicle gets closer to the object and then becomes constant when the obstacle is within 300 mm (12 inches).

Note: *The front parking aid provides an audible proximity warning when driving forwards and when reversing.*

CLEANING THE SENSORS



When washing the vehicle do not aim high pressure water jets directly at the sensors. Do not use abrasive materials or hard/sharp objects to clean the sensors. Only use approved vehicle shampoo.

The sensors should be kept clean to maintain accuracy and performance.

PARKING AID SYSTEM FAULT

If a system fault is detected, a long high-pitched tone will sound, and the switch indicator will flash. Contact your Dealer/ Authorised Repairer as soon as possible.

PARKING AID VOLUME

To set the volume of the parking aid warning tones:

- Select **Setup** from the touch screen Home menu, then select **System**.
- Select **Volume presets**, then use the **+** or **-** soft keys alongside Parking aid to adjust volume for both front and rear warning tones.