


ELECTRIC WINDOWS

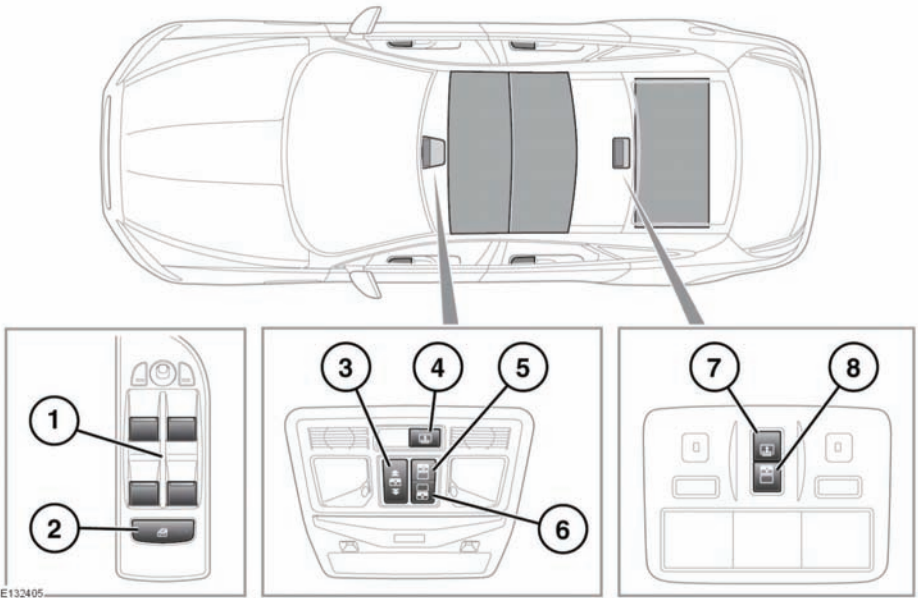

1. Window switches.

The windows will operate for 5 minutes after the engine is switched off, as long as none of the doors are opened.

⚠ Any ice should be removed from the windows prior to operation.

2. Rear windows, rear electric seats and rear sunroof blind isolator.

⚠ **If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows.**

3. Sunroof: Press once to tilt the roof. Once tilted, press again to open the roof.

Press to close the roof from tilt. From the fully open position, press once to close to the tilt position, then press again to close fully.

Roof movement can be halted at any time by pressing the button again.

Note: The front roof blind will open when the roof is tilted or when the roof is fully opened.

⚠ The roof blinds are electrically operated. Do not try to operate them manually.

If the sunroof encounters resistance when closing it will stop, and then open fully. This is to prevent serious injury or damage to the mechanism.

4. Rear screen sun blind.

5. Rear sunroof blind. One push of the button will fully open or close the blind. Opening or closing cannot be halted part way.

6. Front sunroof blind. One push of the button will fully open or close the blind. Opening or closing cannot be halted part way.

E132405