

4. Connect the other end of the negative jump lead to the negative post (C).



Check that all cables are clear of any moving components and that all four connections are secure.

**Note:** *If repeated attempts to start the disabled vehicle are needed, allow the donor vehicle to idle for a few minutes between attempts.*

5. Start the engine of the donor vehicle, and allow it to idle for a few minutes.
6. Start the engine of the disabled vehicle.

**Note:** *If repeated attempts to start the disabled vehicle are needed, allow the donor vehicle to idle for a few minutes between attempts.*

7. Allow both vehicles to idle for 2 minutes.
8. Switch off the donor vehicle.

## DISCONNECTING JUMP LEADS



**To avoid serious injury use extreme caution when removing the jump leads as the engine will be running on the previously disabled vehicle. This means that you may be working close to components which are moving at high speed, carry high voltage, or may be hot.**

**Note:** *Do not switch on any electrical equipment until after the cables have been disconnected.*

The engine should be running on the previously disabled vehicle and the engine switched off on the donor vehicle. Disconnect the jump leads in the exact reverse order of that used for connection.

## CONNECTING A STARTING AID



**Do not connect the starting aid to any battery terminal on your vehicle. Doing so may cause a spark, which can result in an explosion. It may also result in damage to the charging system.**

To start the vehicle using a starting aid or a slave battery, follow the instructions in the sequence given.

1. Connect the positive (Red) cable to the positive terminal of the disabled vehicle.
2. Connect the negative (Black) cable to the negative terminal of the disabled vehicle.
3. Connect/switch on the starting aid.
4. Start the engine and allow it to idle.
5. Disconnect/switch off the starting aid.
6. Disconnect the negative (Black) cable from the negative terminal of the vehicle.
7. Disconnect the positive (Red) cable from the positive terminal of the vehicle.

## CHARGING THE VEHICLE BATTERY



The battery must be disconnected and removed from the vehicle before charging.



Battery disconnection, removal and replacement, should only be carried out by qualified personnel. Consult your Dealer/Authorised Repairer.