


Touch screen

TOUCH SCREEN HOME MENU

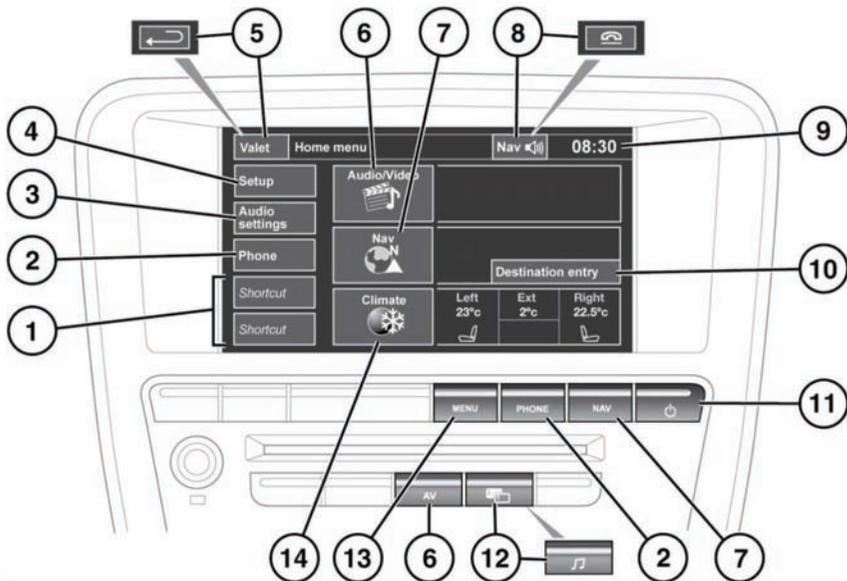

E142480

⚠ Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

ⓘ Always run the engine during prolonged use of the touch screen. Failure to do so may discharge the vehicle battery, preventing the engine from starting

ⓘ Avoid spilling or splashing liquids onto the touch screen.

1. Touch to select Home menu shortcuts. See **59, TOUCH SCREEN SETUP**.
2. Touch or press to select the **Phone** menu.
3. Touch to select the **Audio settings** menu.
4. Touch to select the touch screen **Setup** menu.

5. Touch to select **Valet** mode. During menu mode, the icon is changed to the back soft key, touch to return to the previous screen displayed.
6. Touch or press to select the **Audio/Video** menu. See **95, AUDIO/VIDEO CONTROLS**.
7. Touch or press to select the **Navigation** menu. Current set destination is displayed. See **130, MAIN MENU**.
8. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
9. Touch to adjust time/date.
10. Touch for shortcut to the **Destination entry** menu. See **132, SETTING A DESTINATION**.
11. Press to turn the touch screen on or off.