






Maintenance

-  **Keep your hands and clothing away from drive belts, pulleys and fans. Some fans may continue to operate after the engine has stopped.**
-  **Remove metal wrist bands and jewellery, before working in the engine compartment.**
-  **Do not touch electrical leads or components while the engine is running, or with the starter switch turned on.**
-  **Do not allow tools or metal parts of the vehicle to make contact with the battery leads or terminals.**


FUEL SYSTEM

-  **Under no circumstances should any part of the fuel system be dismantled or replaced by anyone other than a suitably qualified vehicle technician.**
-  **Ensure sparks and naked lights are kept away from the engine compartment.**
-  **Wear protective clothing, including, where practicable, gloves made from an impervious material.**

USED ENGINE OIL

-  **Prolonged contact with engine oil may cause serious skin disorders, including dermatitis and cancer of the skin. Always wash thoroughly after contact.**

OPENING THE BONNET


-  **Do not attempt to open the bonnet if the pedestrian protection system has deployed.**



E132655

1. Pull the bonnet release handle located in the left-hand front footwell.
2. Lift the bonnet safety catch lever located below the centre point of the bonnet, and raise the bonnet.

CLOSING THE BONNET

-  **Do not drive with the bonnet retained by the safety catch alone.**
- 1. Lower the bonnet until the safety catch engages. Using both hands, press the bonnet down until the catches click.
- 2. Check that both catches are fully engaged by attempting to lift both sides of the front edge of the bonnet. This should be free from all movement.