

The Auto high beam feature can be disabled/enabled via the Vehicle set-up area of the instrument panel menu.

**Note:** Ensure that the sensor in the rear view mirror is not blocked or obstructed.

## HEADLAMPS - DRIVING ABROAD

There are two types of headlamps:

1. Manually adjusted lamps.
2. Adjustment free lamps.

**Manual headlamp beam adjustment:** The headlamp beam pattern can only be changed by your Dealer/Authorised Repairer.



E135218

**Adjustment free headlamps:** If the headlamps are marked with the above symbols which are found on top of the headlamp, no mechanical adjustment is required or the need for any external obscuration decals.

These headlamps are fully compliant with current homologation requirements in all ECE countries.

## HEADLAMPS - CONDENSATION

In certain circumstances, misting may occur on the inside of a lamp lens. This is caused by natural changes in environmental conditions. This misting is not detrimental to lamp performance and will clear during normal usage.