

# Heating and ventilation

## HEATED SEATS

**Note:** *The seat heaters will only operate when the engine is running.*

The heated seats are controlled through the touch screen.

To access the heating controls for front seats:

- Press the seat menu button on the fascia.
- Or, select the seat icon on the touch screen navigation bar.
- Or, from the Climate menu, select **Front seats**.

To access the heating controls for rear seats from the front touch screen:

- From the Climate menu, select **Rear climate**, then select **Rear seats**.

To adjust the seat temperature:

- Touch the upper (red) or lower (blue) arrow for the relevant seat repeatedly, to select 1 of 3 temperature settings (as indicated by the bars adjacent to the arrows).
- If no bars are illuminated, the seat heaters are switched off.

## CLIMATE SEATS

**Note:** *The climate seats will only operate when the engine is running.*

Seat heating and ventilation is controlled from the **Home** or **Climate** menus on the touch screen or by the seat menu button.

Heated ventilation:

- Touch the red arrow icon to switch heated ventilation on at maximum (3 red bars).
- Touch the blue arrow icon once or twice to reduce the ventilation setting (2 and 1 red bars).
- Touch the blue arrow a third time to switch off seat ventilation.

Cooled ventilation:

- Touch the blue arrow icon to switch cooled ventilation on at maximum (3 blue bars).
- Touch the red arrow icon once or twice to reduce the ventilation setting (2 and 1 blue bars).
- Touch the red arrow a third time to switch off seat ventilation.

To select backrest ventilation only:

- Select **Settings** from the **Climate** menu.
- Select the appropriate icon for full seat or backrest only ventilation.

## SEAT MASSAGE

**Note:** *Seat massage will only operate when the engine is running.*

*Seat massage may not operate when the vehicle interior temperature is below 0°C or above 50°C.*

Seat massage is controlled through the touch screen:

- Either, press the seat menu button on the fascia or;
- From the Climate menu, select **Front seats**.
- Select **Start** or **Stop** for the relevant seat to switch the seat massage on or off.

After 10 minutes, the seat massage will stop automatically.

For vehicles fitted with rear seat massage, see **16, ELECTRIC SEATS**.