

USING RSE

The system is operated using the remote control. The remote is removed from the arm rest by pressing the top of the remote to unlatch it.

- ⓘ Do not attempt to pull the remote control out of its docked position.

When the system is activated the remote control touch screen becomes active.



E142186

Use the left/right screen select keys on the rear media remote control, or the front touch screen controls, to allow further options to be set and selected.

Note: A help screen is available from each screen/menu. To view the help screen for guidance on the available functions and options, touch the question mark (?) icon.

HEADPHONES

The volume control for each set of headphones is adjusted on the headphones.

REAR MEDIA REMOTE CONTROL BATTERY

The remote control battery is automatically recharged while the remote is docked. The battery should only be changed or removed by a Dealer/Authorised Repairer.