

# Vehicle labels

## LABEL LOCATIONS




Warning labels attached to your vehicle bearing this symbol mean: Do not touch or adjust components until you have read the relevant instructions in the handbook.



Labels showing this symbol indicate that the ignition system utilises very high voltages. Do not touch any ignition components while the starter switch is turned on.

Labels are applied to draw your attention to important subjects (e.g. tyre pressures, airbags, engine compartment hazards, etc.).

Additional information labels may also be found at these locations.

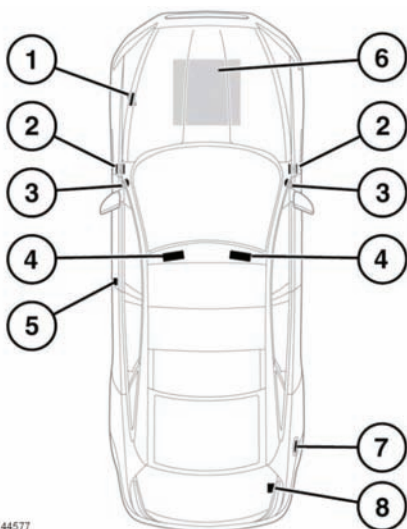

E144577

1. Air conditioning label - Left-hand inner wing.

2. Vehicle Identification plate, including the Vehicle Identification Number (VIN) and recommended maximum vehicle weights - Located on the left-hand A pillar for all markets except China. In Chinese markets, the plate is situated on the right-hand A pillar.

**Note:** The VIN number is also stamped on a plate, visible through the bottom left-hand side of the windscreen.

3. Passenger airbag label - End of fascia (passenger side).
4. Airbag label - Sun visor.
5. Tyre pressure label and Airbag warning label - Base of B pillar on the driver's side.
6. Engine number:

2.0 litre petrol, stamped into the engine mounting flange.

All other engines, located on the front of the right-hand cam cover.

7. Fuel specification label - Inner face of fuel filler flap.
8. Battery warning symbols - Top face of battery.

It is important that you are familiar with these subjects to ensure that your vehicle and its features are used safely. Using the index at the back of this handbook, refer to the relevant topic for more information.

## TRANSMISSION NUMBER

The transmission number is located on a label attached to the transmission casing.

## VEHICLE BUILD DATE PLATE

The vehicle built date is shown on the VIN plate.