

Warning lamps

If Trac DSC is selected, the warning lamp will also illuminate and the message **Trac DSC** is displayed for 4 seconds.

REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

FOLLOW MODE (AMBER)



Illuminates when the Adaptive cruise control system is in follow mode.

AIRBAG (AMBER)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If the lamp illuminates when driving, there is a fault with the airbag system. Seek qualified assistance as soon as possible.

AUTOMATIC SPEED LIMITER (AMBER)



Illuminates when Automatic Speed Limiter is active.

EXTERNAL TEMPERATURE (AMBER)



Illuminates when the external temperature is low enough that ice may be present on the road.

TYRE PRESSURE MONITORING SYSTEM (YELLOW)



The warning lamp illuminates, accompanied by a message in the message centre, to warn that one or more tyres are significantly under-inflated. Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.

The lamp will flash to indicate a system fault.

HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

SIDE LAMPS (GREEN)



Illuminates when the side lights are switched on.

HIGH BEAM ASSIST (GREEN)



Illuminates when the high beam assist feature has switched on the high beams.

INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Intelligent Stop/Start system.