


# Heating and ventilation

## CLIMATE CONTROL

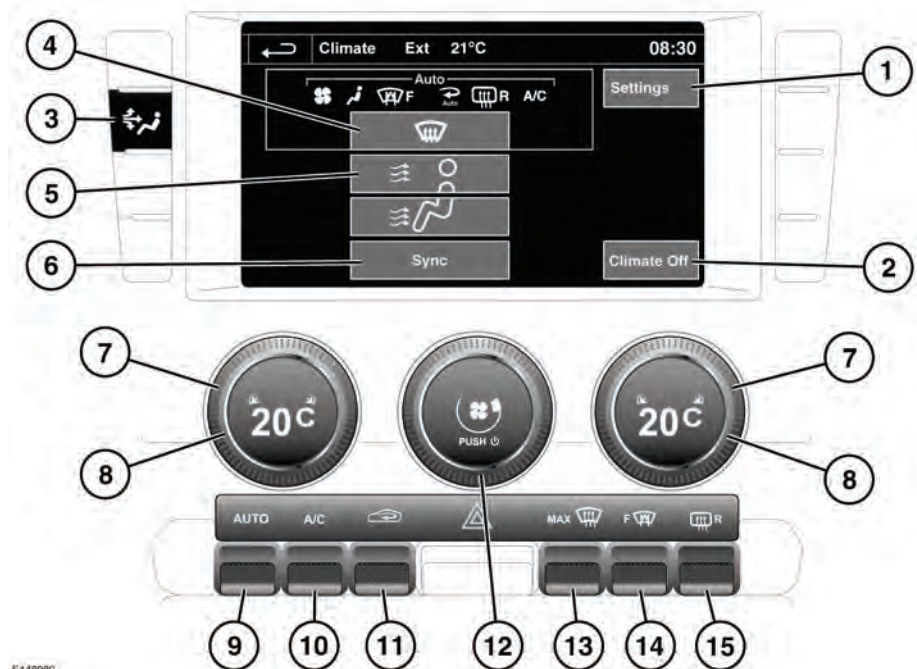

E148980

1. Climate control settings menu.
2. Climate control system on/off.
3. Shortcut to climate menu.

To access the climate menu from the touch screen home menu, setup **Climate** as a short-cut. See **53, TOUCH SCREEN HOME MENU**.

4. Distribute air to windscreen.
5. Air distribution.

Deployable centre vents will open automatically when the face or face/foot modes are selected. The vents will close automatically when the maximum defrost, defrost/foot or foot only modes are selected.

The deployable centre vents can be set to always open via the Climate control settings menu.

**Note:** More than one setting may be selected at a time to achieve the desired distribution.

**Note:** The deployable centre vents will always close when the climate control system is switched off or when the ignition is switched off.

6. Synchronise driver and passenger climate zone settings.
7. Temperature controls. For individual driver/passenger settings. Rotate to change the temperature.
8. Press to access the heated seats.