Stability control

TRACDSC



Vehicle safety may be reduced by inappropriate use of Trac DSC. Trac DSC should only be used in suitable conditions.

Trac DSC is an alternative setting of DSC, with reduced system interventions. With Trac DSC engaged, traction may be increased, although stability may be reduced compared to normal DSC. Trac DSC is intended for use only on dry tarmac, by suitably experienced drivers. Trac DSC should not be selected for other surfaces or by drivers with insufficient skill and training to operate the vehicle safely with Trac DSC function engaged.

Press and hold the DSC switch for 1 second and then release.

SWITCHING BETWEEN DSC AND TRACDSC

Press and hold the DSC switch for less than 3 seconds. The Message centre will temporarily display either **TracDSC** or **DSC On**.


The DSC Off warning lamp will illuminate when TracDSC is active.

Note: Cruise control will automatically be disengaged.

JAGUARDRIVE CONTROL

The JaguarDrive Control switch is located on the driver's side of the centre console, next to the gear selector. See **206**, **DRIVER CONTROLS**.

Note: The switch lever will always return to the centre position when released, regardless of the mode selection.

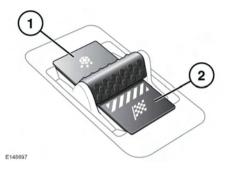

- Move the switch lever to the Rain/Ice/Snow mode position to engage. Repeat this action to disengage. See 74, RAIN/ICE/SNOW MODE.
- Move the switch lever to the Dynamic mode position to engage. Repeat this action to disengage. See 75, DYNAMIC MODE.

When Rain/Ice/Snow mode or Dynamic mode is engaged then the relevant switch lamp will remain illuminated.

When Rain/Ice/Snow mode or Dynamic mode is disengaged then the relevant switch lamp will extinguish.

RAIN/ICE/SNOW MODE



Rain/Ice/Snow mode optimises stability of the vehicle to suit low grip conditions. This helps the vehicle to perform in a more gentle and

controlled manner, to avoid skidding, allowing more confident progress under adverse conditions

Note: Rain/Ice/Snow mode cannot be active at the same time as Dynamic mode.

Note: Rain/Ice/Snow mode will remain selected indefinitely, even after the ignition is switched off. Rain/Ice/Snow mode must be deselected if no longer required.