

8. Seek down:
  - Short press to skip/move to the previous radio preset or previous preset TV channel, or previous track on the list.
  - Long press to seek to the previous radio station or to select the previous TV channel on the channel list.

**Instructional video** - Steering wheel controls.



## AUDIO SETTINGS


To view the audio settings menu, touch the **Settings** soft key on the **Audio/video menu** screen. See **53, TOUCH SCREEN HOME MENU**.

To adjust the sound settings:

1. Touch the + or - soft keys to adjust Bass, Treble or Subwoofer levels.
2. If surround sound is fitted, touch **DPLIIx**, **DTS Neo:6**, **Meridian Trifield** or select **Off** to switch surround sound off.

**Note:** Surround sound options are not available for certain sources where the surround sound mode is set automatically.

To adjust balance and fade:

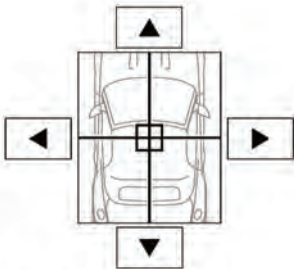

1. From the Sound settings menu, select **Balance/Fade**.
2. Touch the arrow soft keys to move the sound focal point to the desired area of the vehicle. Alternatively, touch the sound focal point and 'drag' it to the required position.

**Instructional video** - Audio settings.



## LOADING DISCS

- ⓘ Do not force the disc into the slot.
- ⓘ Do not use irregular shaped CDs or DVDs and those with a scratch protection film or self-adhesive label attached.
- ⓘ The CD unit will play compact discs that conform to the international Red Book standard audio specification. Playback of CDs not conforming to this standard cannot be guaranteed.
- ⓘ Recordable (CD-R) discs and re-writable (CD-RW) discs may not function correctly.
- ⓘ Recordable (DVD-R or DVD+R) discs may not function correctly.
- ⓘ Dual format, dual-sided discs (DVD Plus, CD-DVD format) are thicker than normal CDs and consequently playback cannot be guaranteed, and jamming may occur.