

If any of the following warning lamp conditions occur, the vehicle should be checked by your Dealer/Authorised Repairer immediately.

- The warning lamp fails to illuminate when the START/STOP button is initially switched on.
- The warning lamp fails to extinguish within (approximately) 6 seconds of the START/STOP button being switched on.
- The warning lamp illuminates at any time other than during the bulb check.

When the ignition is switched on a diagnostic control unit monitors the readiness of the system's electrical circuits. The elements of the Supplementary Restraint System (SRS) being monitored include:

- SRS warning indicator.
- Rotary coupler.
- Airbag modules.
- Seat belt pre-tensioners.
- Airbag diagnostic control unit.
- Crash sensors.
- Airbag wiring harnesses.

## DISABLING THE PASSENGER AIRBAG

(Not Australia)



**The passenger airbag should be disabled only when a child restraint is fitted to the front passenger seat.**



**Do not use a child restraint on a seat protected by an operational airbag in front of it. Doing so presents a high risk of death or serious injury to the child in the event of an accident.**

The passenger airbag can be switched on and off using the interactive controls on the Instrument panel when the vehicle is stationary, see **31, INSTRUMENT PANEL MENU**.

Select **Passenger Airbag** from the Vehicle Set-up menu, located in the Main menu.

The displayed text and diagram will show the current **Passenger Airbag On** or **Off** status. Select **Change Setting** to choose either **On** or **Off**.



E150458

A warning lamp in the roof console will illuminate if Passenger Airbag Off setting is selected.

**Note:** The Instrument panel will also display a warning for 4 seconds every time the ignition is switched on.



**As soon as the child seat is removed from the front passenger seat, the airbag must be turned on. Failure to do so will put any front seat passengers at greater risk of death or serious injury in the event of an accident.**



**When checking the operational status of the front passenger airbag, ensure that the ignition is switched on.**



**Do not fit a child restraint to the front passenger seat if the Airbag warning lamp illuminates continuously with the ignition on.**