

DYNAMIC MODE



Dynamic mode co-ordinates the vehicle's control systems to deliver a high performance driving experience.

Note: Dynamic mode cannot be active at the same time as Rain/Ice/Snow mode.

Note: Dynamic mode will remain selected for approximately 6 hours after the ignition is switched off, after which point it will need to be selected again if required.

Note: When the transmission is set to permanent manual mode and Dynamic mode is selected, transmission upshifts are fully controlled by the driver. The transmission will not change up automatically, even when the rev limit is reached (the gear position indicator in the Message centre will glow amber, to indicate that the next gear should be selected).

DYNAMIC LAUNCH

Dynamic launch enhances vehicle acceleration and automatic gear changes during launch.

To activate:

1. Make sure that:
 - The vehicle is stationary.
 - The engine is running.
 - The steering is in the straight ahead position.
 - Dynamic mode is engaged. See **74, JAGUARDRIVE CONTROL.**
2. Depress the brake pedal and hold with the left foot.
3. Select either Drive (**D**) or Sport (**S**). See **70, AUTOMATIC TRANSMISSION.**
4. Using the right foot, lightly depress the accelerator pedal until the Message centre displays **DYNAMIC LAUNCH READY.**

5. Release the brake pedal then quickly press the accelerator pedal to the kick down position. The Message centre will display **DYNAMIC LAUNCH ACTIVE.**

Note: Any manual gear selection, from the gear selector or steering wheel gearshift paddles, will override the Dynamic launch operation.

Dynamic launch will remain available for further use after a short period of time.

Note: Dynamic launch will not be active when the accelerator pedal is released from a high demand position.

Prolonged application of the brake pedal will deactivate Dynamic launch.

Instructional video - Dynamic mode and Dynamic launch.

