

# Maintenance

The bulb holder is a plastic unit that incorporates the bulb. No tools are required but a torch may be of use.

1. At the rear of the lamp unit, turn the bulb holder a small amount counter-clockwise, until resistance is felt then lightly pull to release. Lower the bulb holder as far as the attached wiring will allow.

**Note:** Prior to and during removal, note the bulb housing orientation to aid installation.

2. Remove the bulb from the holder by lightly pressing and turn a small amount counter-clockwise, until resistance is felt, then lightly pull.

**Note:** Note the orientation of the bulb alignment lugs during removal.

Reverse the removal process to install a new bulb and refit the bulb holder to the lamp unit.

See **180, BULB SPECIFICATION** for the replacement bulb specification list.

## WINDOW RESET

The windows will need to be reset if the battery is disconnected, becomes discharged or power supply is interrupted.

Once the power supply is restored, reset the windows as follows:

1. Close the window fully.
2. Release the switch, then lift it to the close position and hold for 2 seconds.
3. Open the window fully.
4. Release the switch, then push it to the open position and hold for 2 seconds.
5. Lift and release the switch to operate the one-touch function.
6. Repeat the procedure on each window.

## WARNING TRIANGLE

If supplied, the warning triangle is located in the luggage compartment, attached to an anchor point.

## FIRST AID KIT

If supplied, the first aid kit is strapped to the side of the luggage compartment.

## FIRE EXTINGUISHER

If supplied, the fire extinguisher will be located either in the luggage compartment, or mounted to the front passenger seat.

## REPAIRING MINOR PAINT DAMAGE

Regularly inspect the paintwork for damage. Any stone chips, fractures, or deep scratches, in the paint/bodywork should be repaired promptly. Bare metal will corrode quickly, and if left untreated can result in expensive repairs.

## CLEANING THE ALLOY WHEELS



Only use approved wheel cleaning products.

## CLEANING THE EXTERIOR



Make sure the spoiler mechanism and drainage holes are kept clean and free of debris.



Never use cleaning products which are not approved for use on vehicles.



Following cleaning of the vehicle exterior (particularly with a pressure washer), it is recommended that the vehicle is taken for a short drive in order to dry out the brakes.