

**4. Valet mode activated** is displayed to indicate that the PIN has been accepted.

The luggage compartment and glove box are now securely locked in Valet mode and the Valet mode On screen is displayed.

Remove and retain the emergency key before giving the Smart key to an attendant.

**Note:** *The emergency key can be used to open the luggage compartment, which may deactivate Valet mode.*

## DESELECTING VALET MODE

1. When you re-enter the vehicle, select **Valet**.
2. Enter your four digit PIN and touch the **Ok** button.

**Valet mode deactivated** is displayed to indicate that your PIN has been accepted.

- The luggage compartment will return to the previously set security requirement.
- The touch screen will be enabled.

**Note:** *If the PIN is forgotten, Valet mode can only be deactivated by your Dealer/Authorised Repairer.*

## EXTRA FEATURES

This menu allows selected extra features to be displayed for adjustment or switched on/off. For example:

- Ambient LED lighting.
- Configurable dynamic mode.

There are more extra features available than can be displayed at any one time, hence they are displayed in alphabetical order. Use the forward or back soft keys to move to the next screen.