

# Warning lamps

## WARNING LAMPS AND INDICATORS

RED warning lamps are for primary warnings. A primary warning must be investigated immediately by the driver or qualified assistance before continuing.

AMBER and YELLOW warning lamps are for secondary warnings. Some indicate that a vehicle system is in operation, others indicate that the driver must take action and then seek qualified assistance as soon as possible.

GREEN and BLUE lamps within the instrument panel indicate system status.

## LAMP CHECK

A warning lamp bulb check is initiated when the ignition system is switched on, the lamps will then go out after a short period. If any warning lamp remains on after the engine is started, investigate the cause before driving.

Some warning lamps have associated messages displayed on the Message centre.

**Note:** *Not all warning lamps are included in the check (e.g. high beam headlamps and direction indicators).*

## CRITICAL WARNING MESSAGE (RED)



Illuminates when a critical warning message is available in the Message centre.

## GENERAL WARNING/INFORMATION MESSAGE (AMBER)



Illuminates when a non-critical warning message or an information message is available in the Message centre.

## ENGINE TEMPERATURE (RED)



Illuminates when the engine temperature is too high, accompanied by a message in the Message centre.

Stop the vehicle as soon as safety permits and seek qualified assistance before continuing.

## BRAKE (RED)



**Do not drive if the message Brake Fluid Low is displayed. Check the brake fluid level and top-up as necessary. If necessary, seek qualified assistance before continuing.**



Illuminates briefly as a bulb check when the ignition is switched on. If the lamp illuminates while driving, suspect low brake fluid level or a fault with the Electronic Brake Distribution (EBD) system.

Stop the vehicle as soon as safety permits and check and top-up the brake fluid, if necessary. If the lamp remains illuminated, seek qualified assistance before continuing.

## PARKING BRAKE (RED)



Illuminates when the parking brake is correctly applied. If the lamp flashes, a fault has been detected. Seek qualified assistance urgently.

## SEAT BELT (RED)



Illuminates, accompanied by a chime, when the vehicle is in motion and an occupied front seat belt is unbuckled. The lamp will extinguish when the relevant seat belt(s) is buckled.

**Note:** *Objects on the front passenger seat may activate the seat belt reminder. It is recommended that any objects placed on the*