

**Note:** If more than 5 phones are detected, it may be necessary to use the scroll bar to see the entire list.

7. When prompted, enter the PIN code into your phone. See your phone's operating instructions for more information.
8. Once your phone is paired and connected to the system, a confirmation message will be displayed before switching to the **Digit dialling** screen.

**Note:** Due to the duration of a **Bluetooth** wireless technology search, it is advised that the timeout to home screen feature is switched off before attempting to search for **Bluetooth** wireless technology devices. This setting can be changed via the Home menu screen, touch **Setup**, **Screen**, **Time out home**.

**Instructional video** - Pairing the vehicle to a Bluetooth device.



## CHANGING THE CONNECTED PHONE


Up to 10 mobile phones can be paired with the vehicle in the same way. However, only one can be connected and ready for use as a phone at any one time.

To connect a different paired phone to the vehicle, follow the steps below:

1. From the **Home** menu, select **Phone**.
2. A menu will appear. Select **Change phone**.
3. Identify and select your phone from the displayed list.

4. Once your phone is connected to the system, a confirmation message will be displayed before switching to the **Digit Dial** screen.

## STEERING WHEEL CONTROLS

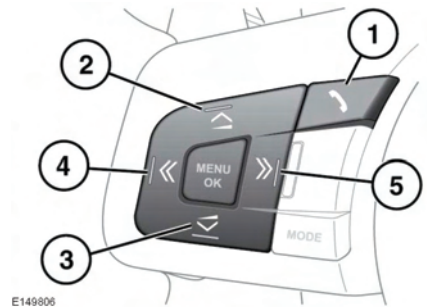

1. Press to answer an incoming call. Press to end a call. Press and release to dial a number/contact. Press and release to access the last 10 dialled list. Press and hold to access the phonebook list view.
2. Increase the volume when in a call, scroll up a displayed list or number listed for a stored contact.
3. Decrease the volume when in a call or scroll down a displayed list or number listed for a stored contact.
4. Press to scroll to the last 10 list and received calls.
5. Press to scroll back through received calls, the last 10 list and finally to exit the list.

**Note:** When scrolling through a phonebook or last 10 list, each contact is also displayed in the **Message centre**.

## CALL VOLUME

During a call, the phone call volume can be adjusted via the steering wheel buttons or the audio system's volume control.