

# Warning lamps

## EXTERNAL TEMPERATURE (AMBER)



Illuminates when the external temperature is low enough that ice may be present on the road.

## TYRE PRESSURE MONITORING SYSTEM (YELLOW)



The warning lamp illuminates, accompanied by a message in the Message centre, to warn that one or more tyres are significantly under-inflated. Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.

The lamp will flash to indicate a system fault.

## HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

## SIDE LAMPS (GREEN)



Illuminates when the side lamps are switched on.

## HIGH BEAM ASSIST (GREEN)



Illuminates when the high beam assist feature has switched on the high beams.

## INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Intelligent Stop/Start system.

**Note:** Other warning lamps normally shown during the lamp check, do not illuminate during an engine shutdown by the Intelligent Stop/Start system.

## DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.

If a direction indicator bulb fails, the audible ticking and warning lamp will sound and flash at twice the normal rate, when that direction indicator is selected.

## CRUISE CONTROL (GREEN)



Illuminates when cruise control or Adaptive cruise control is active.