

## OPENING THE ROOF



**Before opening or closing the convertible roof, make sure that all occupants have moved their hands, fingers, hair, etc. clear of moving parts.**



Do not attempt to operate the convertible roof at temperatures below -20°C (-4°F). This may cause damage to the fabric.



If the convertible roof is operated above 50 km/h (30 mph), there is a risk of damage to the convertible roof.




Do not place items in the roof stowage well.



Do not attempt to open the convertible roof manually, as damage to the linkage mechanism may occur.

**Note:** If the roof movement is inhibited then a warning message will be displayed in the Message centre.

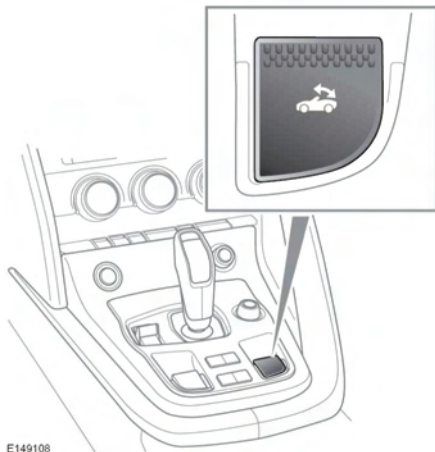

E149108

The power operated convertible roof is controlled by a switch located on the centre console. The ignition system must be on. The roof will latch and unlatch automatically. The

roof can be operated at speeds below 50 km/h (30 mph). However, for safety it should not be opened or closed when the vehicle is being driven.

1. Make sure that the ignition is on.
2. Press and hold the front of the switch.
3. The door windows will fully open. The roof will unlatch and start to move.
4. When the roof is fully open, an audible warning sounds and a message will be displayed in the Message centre.

**Note:** The roof closing panels will automatically close when the roof is in the fully stowed position.

5. Release the switch.

**Note:** If at any period during the convertible roof opening sequence the switch is released, all movement of the convertible roof will cease.

## CLOSING THE ROOF

With the ignition on, pull and hold the front of the switch. See **61, OPENING THE ROOF**. Do not release the switch until the convertible roof is fully latched closed and a confirmation message appears in the Message centre. Continue to hold the switch to close the door windows.

**Note:** If at any period during the convertible roof closure sequence, the switch is released, all movement of the convertible roof will cease.