


USING CRUISE CONTROL



In certain conditions, such as a steep gradient, the vehicle speed may exceed the set cruising speed. This is because engine braking is unable to maintain or reduce the vehicle speed. Driver intervention may be required.

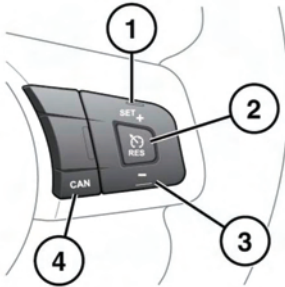

E149533

The system is operated by controls mounted on the steering wheel. The driver can also intervene at any time by use of the brake or accelerator pedals.

1. **SET+**: Press to set the speed or to increase the set speed. The cruise control warning lamp will illuminate to confirm cruise control is operational (see **36, CRUISE CONTROL (GREEN)**).

The cruising speed can also be increased using the accelerator. When the desired speed is reached, press the button to set and maintain the new speed and then release the accelerator.

Note: Cruise control can only be engaged at speeds in excess of 30 km/h (18 mph).

2. **RES**: Press to resume the set speed.



RES should be used only if the driver is aware of the set speed and intends to return to it.

3. Press to decrease the set speed.

4. **CAN**: Press to cancel but retain the set speed in memory.

Cruise control will also be cancelled if the brake pedal is pressed, the gear selector is moved to Neutral (**N**), or if DSC is activated.

Note: If the accelerator pedal is pressed for more than 5 minutes, cruise control will be cancelled.