

Entering the vehicle

6. Emergency key access: Slide up the side cover to release, then tilt away from the Smart key body to remove.
7. Remove the emergency key blade and unfold.
8. Keyless unlock, see **8, KEYLESS ENTRY**: Press to unlock the vehicle. The door handle will deploy.
Note: *Handle in the retracted flush position indicates locked door.*
9. Keyless single lock: Press the rear of the door handle to single lock the vehicle. The door handle will retract to the flush position.
Note: *Handle in the deployed position indicates unlocked door.*
10. Keyless double lock: Press again within 3 seconds of single locking to double lock the vehicle.
11. Emergency door unlock: If the Smart key and Keyless entry fail to open the vehicle, insert the key blade into the slot behind the driver's door handle. Pull and hold the handle for access.

- To unlock, turn the key blade towards the rear of the vehicle and release.

Note: *If the security system is disarmed, all doors and the luggage compartment will be unlocked. If the security system is armed, only the driver's door will unlock.*

Note: *If the vehicle is unlocked using the emergency key blade with the security system armed, the alarm will sound when a door is unlocked. To deactivate the alarm, press the unlock button on the Smart key or press the engine START/STOP button with the Smart key inside the vehicle.*

- To lock, turn the key blade towards the front of the vehicle and release.

Note: *This will lock all doors but will not arm the alarm.*

Instructional video - Deployable door handle.



Instructional video - Emergency entry.



KEYLESS ENTRY



If a Smart key is lost, a replacement can be obtained and reprogrammed to the vehicle by a Dealer/Authorised Repairer. Notify a Dealer/Authorised Repairer as soon as a Smart key is lost or stolen and have the remaining Smart key(s) reprogrammed.

Keyless entry allows the vehicle to be unlocked and disarmed by simply operating the door handle, provided the Smart key is within 1 metre (3 feet).

The Smart key needs only to be on the driver's person; it does not need to be exposed or handled. However, the Smart key may not be detected if it is placed within a metal container or is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including when inside a laptop bag), games console etc. Keep the Smart key clear of such devices when attempting Keyless entry or Keyless starting.

Note: *Keyless entry will unlock the vehicle in accordance with the current security setting (Single-point or Multi-point entry). However, if*