

# Touch screen

**Instructional video** - Operating the Touch screen.



## TOUCH SCREEN USE

- ⚠ Always run the engine during prolonged use of the touch screen. Failure to do so may discharge the vehicle battery, preventing the engine from starting.
- ⚠ Avoid spilling or splashing liquids onto the touch screen.

## TOUCH SCREEN CARE

- ⚠ Do not use abrasive cleaners on the touch screen. For approved cleaning products, contact your Dealer/ Authorised Repairer.

## TOUCH SCREEN SETUP

Select **Setup** from the **Home** menu.

The Setup screen is divided into categories:

- **Screen.**
- **System.**
- **Audio.**

## SCREEN SETTINGS

- **Volume pop-up:** Display Volume pop-up on/off.
- **Screensaver:** Change screensaver.
- **Time out home:** Sub menu selection screens can be set to revert to the **Home** menu after a pre determined length of time.
- **Theme:** Changes appearance of the touch screen soft keys.

## SYSTEM SETTINGS

- **Button feedback:** Select to turn the soft key confirmation tone on/off.
- **Clock adjust:** Select **12** or **24** hour clock. Set current time. Select **Date** to change the date, or to alter the date format. Select **Set**, to store new settings.

***Note:** The clock can also be adjusted from the touch screen time display.*

- **Home menu shortcuts:** Select up to 2 items from the displayed list to appear as shortcuts on the **Home** menu. Select **Clear** to deselect highlighted items.
- **Language:** Select the required language. Touch **Change** to select alternative text displays. Follow the on-screen instructions to confirm.

***Note:** Some languages are not yet available for System display text.*

- **Volume presets:** Adjust volume for the available systems (announcements, parking aid, phone, navigation, etc.).

## SELECTING VALET MODE

Valet mode allows the vehicle to be locked by a parking attendant, without giving access to the luggage compartment and glove box. Valet mode also prevents operation of the touch screen, to prevent access to telephone numbers or navigation addresses.

1. From the **Home** menu, select **Valet**.
2. Enter a 4 digit Personal Identification Number (PIN) (personally chosen). On completion, touch the **Ok** soft key. Enter the PIN again to confirm.
3. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.