


## TOUCH SCREEN HOME MENU

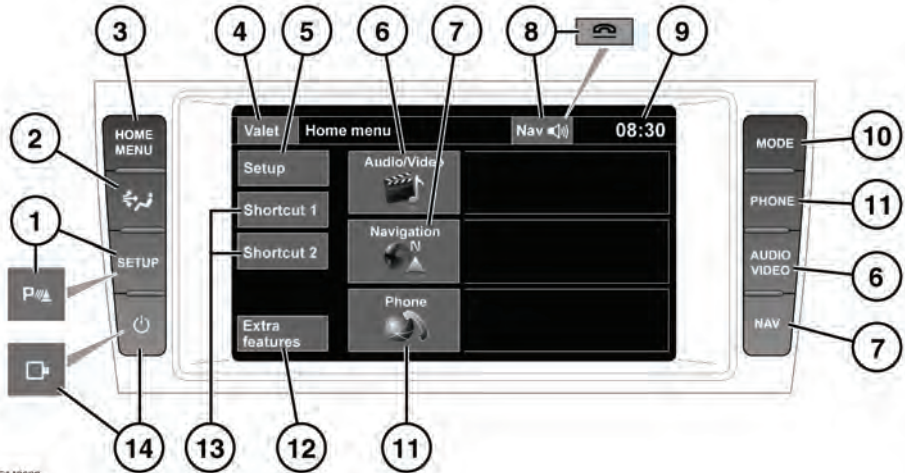

E149032



**Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.**



Always run the engine during prolonged use of the touch screen. Failure to do so may discharge the vehicle battery, preventing the engine from starting



Avoid spilling or splashing liquids onto the touch screen.

1. Press to select the touch screen **Setup** menu. When Parking aids are fitted, press the button to turn the system on/off.
2. Press to select the **Climate** menu.
3. Press to select the **Home** menu.
4. Touch to select **Valet** mode. During menu mode, the icon is changed to the back soft key, touch to return to the previous screen displayed.
5. Touch to select the touch screen **Setup** menu.
6. Touch or press to select the **Audio/Video** menu. See **88, AUDIO/VIDEO CONTROLS**.
7. Touch or press to select the **Navigation** menu. Current set destination is displayed. See **115, MAIN MENU**.
8. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
9. Touch to adjust time/date.
10. **Mode**: Press repeatedly to scroll through all audio/video sources.
11. Touch or press to select the **Phone** menu.
12. Touch to select the **Extra features** menu.
13. Press to select Home menu shortcuts. See **54, TOUCH SCREEN SETUP**.
14. Press to turn the touch screen on or off. When a rear camera is fitted, press the button to turn the camera on/off.