

# Exterior lights

To manually override to low beam from High beam assist, pull the stalk to the flash position and High beam assist will be cancelled. To return to High beam assist, push the stalk to the high beam position and then return it to the central position.



When High beam assist is enabled, the system indicator will illuminate.

**Note:** The following may affect the operation of High beam assist:

- Highly reflective road signs.
- Vehicles with dim headlamps.
- Adverse weather conditions.
- Dirty sensor.
- Dirty, damaged, or misted windscreen.

To turn off High beam assist, turn the rotary control from **AUTO** to headlamps on.

The High beam assist feature can be disabled/enabled via the Vehicle setup area of the Instrument panel menu.

**Note:** Make sure the sensor in the rear view mirror is not blocked or obstructed.

**Instructional video** - Auto lamps and High beam assist.



## HEADLAMPS - DRIVING ABROAD

The headlamp beam pattern is suitable for driving on either side of the road. There is no need for any mechanical adjustment or external decals.

## HEADLAMPS - CONDENSATION

In certain circumstances, misting may occur on the inside of a lamp lens. This is caused by natural changes in environmental conditions. This misting is not detrimental to lamp performance and will clear during normal usage.