

**Note:** Jaguar recommend that owners do not remove or replace relays. It is recommended that you seek qualified assistance in the event of a relay failure.

Spare fuses are located in the tool tray situated under the floor in the luggage compartment.

## ENGINE COMPARTMENT FUSE BOX

**Left side front fuse box.**

Fuse No	Rating (amps)	Fuse Colour	Circuit
F1	15A	Blue	Air conditioning clutch
F2	20A	Yellow	Washer transfer pump
F3	5A	Tan	Active exhaust solenoid
F4	5A	Tan	Monitor
F5	25A	Clear	Engine management (Ignition coils)
F6	5A	Tan	Engine management (MAF sensors)
F7	5A	Tan	Engine management (Sensors)
F8	10A	Red	Engine management (Actuators)
F9	10A	Red	Engine management (Throttle motor)
F10	15A	Blue	Engine management (Variable valve timing)
F11	20A	Yellow	Engine management (Oxygen sensor-left side)
F12	20A	Yellow	Engine management (Oxygen sensor-right side)
F13	20A	Yellow	Engine management (Catalyst oxygen sensor)
F14	-	-	-
F15	-	-	-
F16	5A	Tan	Battery voltage check
F17	-	-	-
F18	30A	Green	Anti-lock brake system (ABS) valves
F19	15A	Blue	Electronic transmission switch, Transmission control module
F20	-	-	-