

## CHANGING/DISCONNECTING A DEVICE

1. From the playback control menu, select **Settings**.
2. From the **Settings** menu, select **Register**.
3. Select **Disconnect**. A confirmation pop-up will appear and then you will be given the option to **Search new** or select a different device from the list of paired devices.