




Parking aids


USING THE PARKING AID

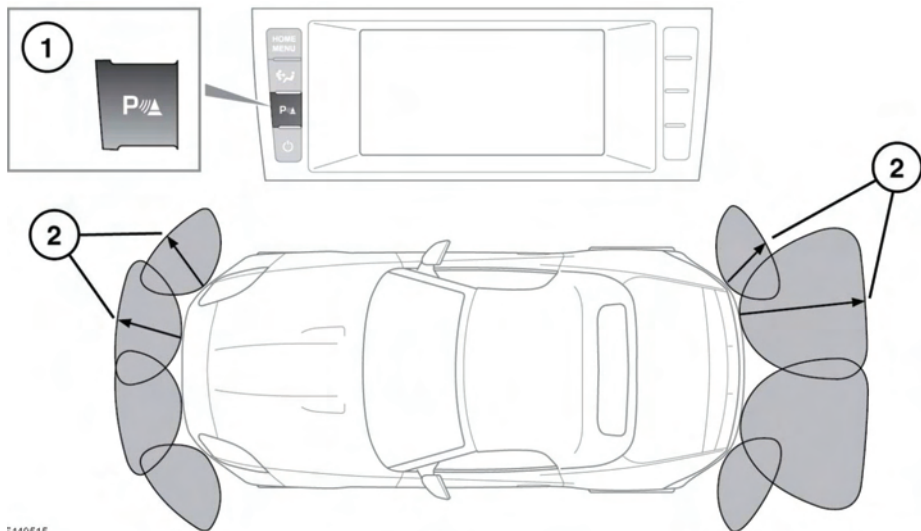

E149515

 **Parking aids may not detect moving objects such as children and animals, until they are dangerously close. Always use extreme caution when manoeuvring.**

 Parking aid sensors may not detect some obstructions (e.g. narrow posts or small objects close to the ground).

 If accessories are fitted to the rear of the vehicle, particular care must be taken when reversing. The rear sensors will only indicate the distance from the bumper to the obstacle.

1. Parking aid switch: Press to turn on or off.
2. Parking aid detection range.

When Reverse (**R**) is selected, the front and rear parking sensors are activated automatically, and the indicator on the parking aid switch will illuminate.

To manually activate the front sensors press the parking aid switch, the switch indicator will illuminate.

To turn off the system when active, press the switch, the switch indicator will extinguish.

The range of the parking aid sensors varies between the front, rear and corners of the vehicle.

The front sensors will remain active as long as the vehicle's forward speed does not exceed 16 km/h (10 mph).

Selecting **N** from **R** will keep front and rear sensors active.

When parking aid is active a pop-up appears on the touch screen showing a plan view of the vehicle and the immediate surrounding area. Touch **Display Off** to cancel the view.

Note: If a rear-view camera is fitted, when reverse gear is selected, the camera display is selected automatically. To view the parking aid display, touch the screen.