


Automatic speed limiter (ASL)

ASL CONTROLS



In certain conditions, such as a steep downhill gradient, the vehicle speed may exceed the set speed limit. This is because engine braking is unable to maintain or reduce the vehicle speed.

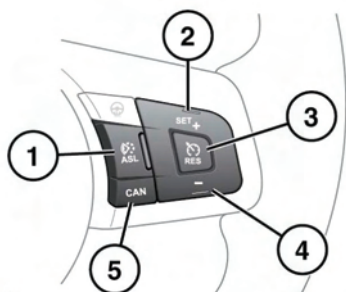

E149541

1. ASL on/off. The ASL button switches between cruise control and ASL. The systems cannot be used simultaneously. The ASL warning lamp will illuminate when ASL is active. See **35, AUTOMATIC SPEED LIMITER (AMBER)**.
2. Set/increase speed limit. The set speed limit will be displayed in the Message centre.
3. Resume ASL assistance. ASL will only resume if the vehicle speed is less than the set speed and greater than 30 km/h (18 mph). If these criteria are not met, a message will be displayed in the Message centre.
4. Decrease speed limit. The set speed limit will be displayed in the Message centre.
5. Suspend ASL assistance. ASL can also be suspended by applying sudden, rapid acceleration (kickdown).

1. ASL on/off. The ASL button switches between cruise control and ASL. The systems cannot be used simultaneously. The ASL warning lamp will illuminate when ASL is active. See **35, AUTOMATIC SPEED LIMITER (AMBER)**.

Note: ASL only operates at speeds between 30 km/h (18 mph) and 240 km/h (150 mph). However, the speed limit can be set while the vehicle is stationary.

2. Set/increase speed limit. The set speed limit will be displayed in the Message centre.

When a speed has been set, the engine will respond normally up to the set speed. Further accelerator pressure will not increase the speed beyond the set speed unless sudden, rapid acceleration (kickdown) is applied. If kickdown is initiated, ASL will be suspended.