

To switch between the rear camera and the parking aid screen, touch the camera image or the **Rear Camera** icon accordingly.

The system can be enabled or disabled via the instrument panel menu, see **31, INSTRUMENT PANEL MENU**. When RTD is disabled, an amber dot (4) will be displayed in both exterior mirrors.

### REVERSE TRAFFIC DETECTION SENSORS

The RTD system will automatically disable if any of the sensors become partially or completely obscured, and the amber warning indicator dot will illuminate in the exterior mirrors and the message Reverse Traffic Sensor Blocked appears in the Message centre.

Check that there is nothing obscuring the rear bumper and it is clear from ice, frost, snow, mud and dirt.

If a fault with a radar sensor is detected, an amber warning indicator dot will illuminate in the exterior mirrors and the message **Reverse Traffic Detection System Not Available** is displayed in the Message centre.

**Note:** *Even if the detected fault only affects the radar sensor on one side of the vehicle, the whole system is disabled. If the fault is temporary, the system will operate correctly once the engine has been switched off and then on again.*

If a fault occurs, consult your Dealer/Authorised Repairer.