

## DYNAMIC STABILITY CONTROL (DSC)



**DSC is unable to compensate for driver misjudgement. It remains the driver's responsibility to drive with due care and attention, in a manner which is safe for the vehicle, its occupants and the other road users.**

DSC optimises vehicle stability, even in critical driving situations. The system controls dynamic stability when accelerating and when starting from a standstill. Additionally, it identifies unstable driving behaviour, such as understeer and oversteer and helps to keep the vehicle under control by manipulating the engine output and applying the brakes at individual wheels.

**Note:** *Some noise may be generated when the brakes are applied.*

When engaged, DSC will constantly communicate with various vehicle management systems to monitor the behaviour of the vehicle. If necessary it will engage and operate the required system(s) to help maintain control of the vehicle's dynamic stability.

These management systems include:

- Engine.
- Transmission.
- Brakes.
- Steering.
- Suspension.

## SWITCHING DSC OFF



E151130

Press and hold the DSC switch for more than 3 seconds.

- The Message centre will display **DSC Off** and a short warning chime will sound.
- The DSC Off warning lamp in the instrument panel will illuminate. See **35, DYNAMIC STABILITY CONTROL (DSC) (AMBER)**.

## SWITCHING DSC ON

Press the DSC switch for 1 second and then release .

The DSC system will switch on, the Message centre will temporarily display **DSC On**.

**Note:** *Switching the engine off and then on again, will always revert DSC status to DSC On, regardless of which mode is selected.*