

# Vehicle labels

## LABEL LOCATIONS




Warning labels attached to your vehicle bearing this symbol mean: Do not touch or adjust components until you have read the relevant instructions in the handbook.



Labels showing this symbol indicate that the ignition system utilises very high voltages. Do not touch any ignition components while the starter switch is turned on.

Labels are applied to draw your attention to important subjects (e.g. tyre pressures, airbags, engine compartment hazards, etc.). Additional information labels may also be found at these locations.

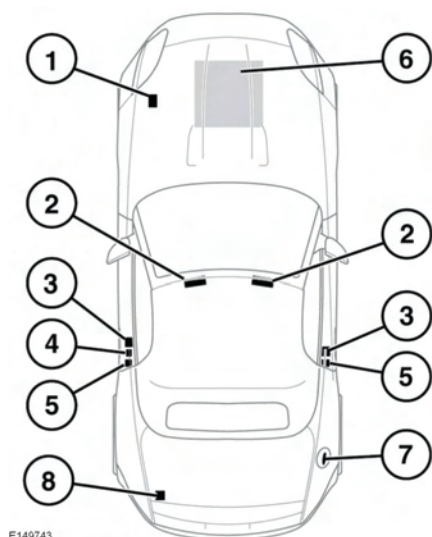

E149743

1. Air conditioning label - Left side inner wing.

2. Airbag label - Both sun visors.

3. Vehicle identification plate, including the Vehicle Identification Number (VIN) and recommended maximum vehicle weights - Located on the left side B pillar for all markets except China. In Chinese markets, the plate is situated on the right side B pillar.

The vehicle built date is shown on the VIN plate.

**Note:** The VIN number is also etched onto a plate, visible through the bottom left side of the windscreen and stamped into the vehicle body next to the suspension turret.

4. Tyre pressure label - B pillar driver's side.

5. Airbag warning labels - B pillar. The Side head/thorax airbag label is on both sides, the Passenger airbag label is on the passenger side only.

6. Engine number - Front of right hand camshaft cover.

7. Fuel specification label - Inner face of fuel filler flap.

8. Battery warning symbols - Top face of battery.

It is important that you are familiar with these subjects to make sure that your vehicle and its features are used safely. Using the index at the back of this handbook, refer to the relevant topic for more information.