


When objects are detected, the parking aid emits a warning tone which increases in frequency as the vehicle gets closer to the object and then becomes constant when the obstacle is within 300 mm (12 ins).

**Note:** *The front parking aid provides an audible proximity warning when driving forwards and when reversing.*

## CLEANING THE SENSORS

 When washing the vehicle do not aim high pressure water jets directly at the sensors. Do not use abrasive materials or hard/sharp objects to clean the sensors. Only use approved vehicle shampoo.

The sensors should be kept clean to maintain accuracy and performance.

## PARKING AID SYSTEM FAULT

If a system fault is detected, a long high-pitched tone will sound, and the switch indicator will flash. Contact your Dealer/Authorised Repairer as soon as possible.

## PARKING AID VOLUME

To set the volume of the parking aid warning tones:

- Select **Setup** from the touch screen Home menu, then select **System**.
- Select **Volume presets**, then use the **+** or **-** soft keys alongside Parking aid to adjust volume for both front and rear warning tones, or rotate the volume control knob when the warning tones are sounding.



## REAR CAMERA



**It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when reversing.**

When reverse gear is selected, the touch screen automatically displays a wide angle, colour image from the rear of your vehicle.

The rear view camera system provides a rear view image to assist in reversing the vehicle. Overlaid on the image are reversing guidelines.

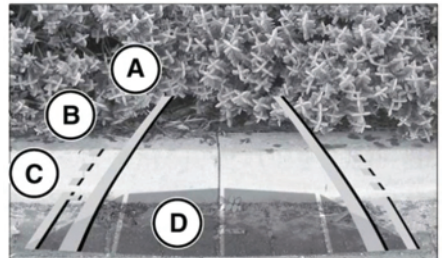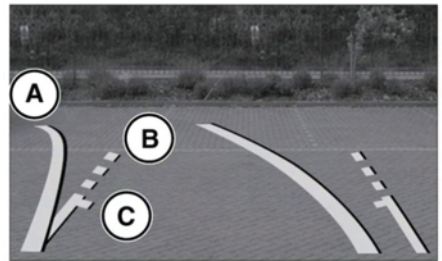

E142176

- A.** Solid line: The projected wheel trajectory.
- B.** Dotted line: The safe working width of the vehicle (including exterior mirrors).
- C.** Luggage compartment access guidelines: Do not reverse past this point if luggage compartment access is required.