



# Fluid level checks

## FLUID FILLER LOCATIONS

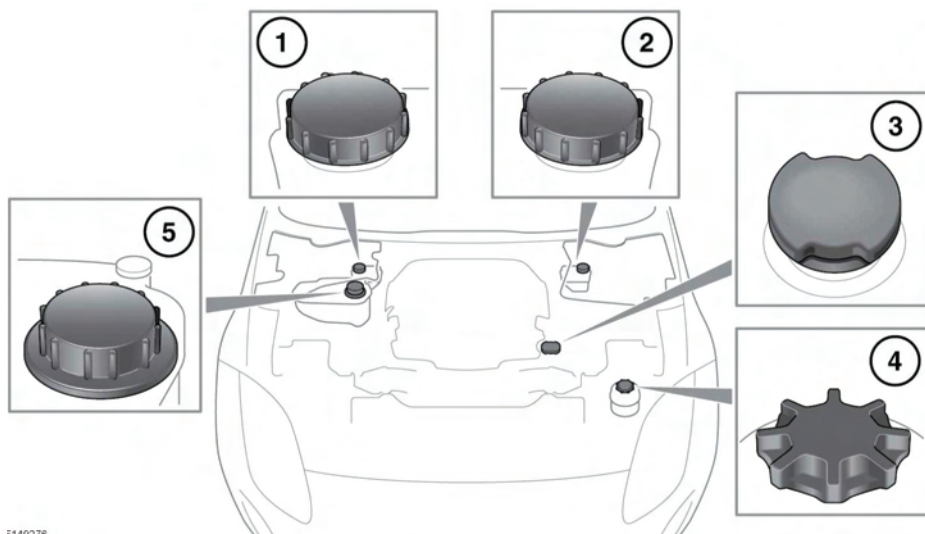

E149276

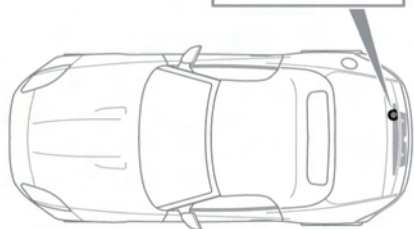

E149691

**Note:** The brake fluid reservoirs, for both the left and right hand drive vehicles are located underneath an access cover. See **133, UNDER BONNET COVERS - REMOVAL**.

1. Brake reservoir (right hand drive vehicles).
2. Brake reservoir (left hand drive vehicles).
3. Engine oil.
4. Power steering reservoir.
5. Coolant reservoir (expansion tank).
6. Washer fluid reservoir.



**Do not drive the vehicle if there is a possibility that leaked fluid will come into contact with a hot surface, such as the exhaust.**



**While working in the engine compartment, always observe the safety precautions. See 132, SAFETY IN THE GARAGE.**