



Fluid level checks

FLUID FILLER LOCATIONS

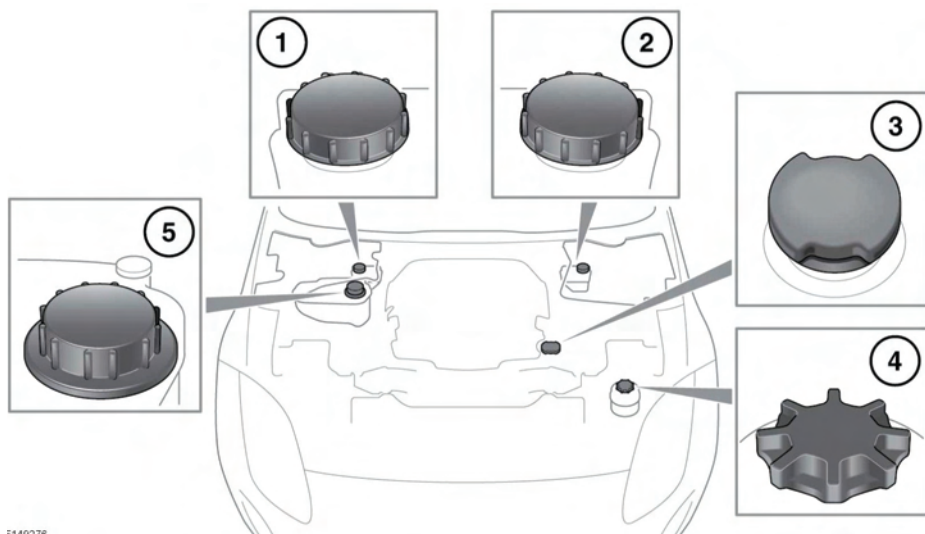

E149276

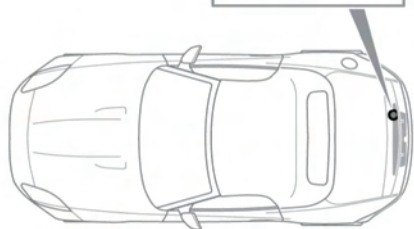

E149691

Note: The brake fluid reservoirs, for both the left and right hand drive vehicles are located underneath an access cover. See **133, UNDER BONNET COVERS - REMOVAL**.

1. Brake reservoir (right hand drive vehicles).
2. Brake reservoir (left hand drive vehicles).
3. Engine oil.
4. Power steering reservoir.
5. Coolant reservoir (expansion tank).
6. Washer fluid reservoir.



Do not drive the vehicle if there is a possibility that leaked fluid will come into contact with a hot surface, such as the exhaust.



While working in the engine compartment, always observe the safety precautions. See 132, SAFETY IN THE GARAGE.