

Steering wheel


ADJUSTING THE STEERING WHEEL



Never adjust the steering wheel while the vehicle is moving.



Do not use steering wheel mounted security devices. Movement of the steering wheel in exit and entry mode, could result in damage to the vehicle or possible injury to the occupant.

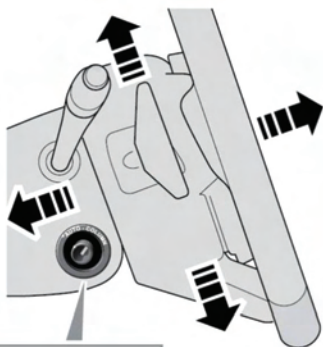

E149542

The steering wheel can be adjusted for tilt and reach as follows:

- Move the control forwards or rearwards to adjust reach.
- Move the switch up or down to adjust tilt.

Up to 3 steering wheel positions can be stored and recalled, along with seat and exterior mirror positions, by the driving position memory. See **18, DRIVING POSITION MEMORY**.

ENTRY AND EXIT MODE

With the steering column control in the **AUTO** position, the steering column will move to provide easier entry and exit from the vehicle.

On opening the driver's door the system will raise the steering column to the highest position, assisting with exit from the vehicle. When the driver's door is closed and the ignition turned on, the system will return the steering column to the previous position.

Note: If the steering column is adjusted during entry or exit operation, automatic movement will stop.

To prevent automatic movement of the steering column, turn the control clockwise to the manual position.

Note: If the steering column switch is moved away from **AUTO** when the steering column is in the exit position, the steering column will move back to its previous position when the driver's door is closed and the ignition is switched on.

HEATED STEERING WHEEL



E149544

To activate the heated steering wheel, press the switch. Press again to turn off.