

illuminate. If the warning lamp illuminates, make sure the cap is fitted correctly.

To close the filler flap, push the flap until latched closed.

**Note:** *The filler flap will only be locked closed when the vehicle is centrally locked.*

## FUEL FILLER



**Do not attempt to fill the tank to its maximum capacity. If the vehicle is to be parked on a slope, in direct sunlight or high ambient temperature, expansion of the fuel could cause spillage.**



Check the fuel pump information carefully to ensure that you are putting the correct fuel into the vehicle.



If the vehicle is filled with incorrect fuel, it is essential that you seek qualified assistance before you start the engine.

Fuel station pumps are equipped with automatic cut-off sensing to avoid fuel spillage. Ensure that the correct fuel type nozzle is fully inserted into the filler neck and fill the tank slowly until the filler nozzle automatically cuts-off the supply. Do not attempt to fill the tank beyond this point.

## FUEL TANK CAPACITY

Avoid the risk of running out of fuel and never intentionally drive the vehicle when the fuel gauge indicates that the tank is empty. When refuelling your vehicle after the fuel gauge reads empty, you may not be able to add the fuel quantity shown below, as there will be a small reserve remaining in the tank.

Total tank capacity (usable)	70 litres (15.4 gallons)
------------------------------	-----------------------------

## FUEL SPECIFICATION

Petrol - 95-98 RON